


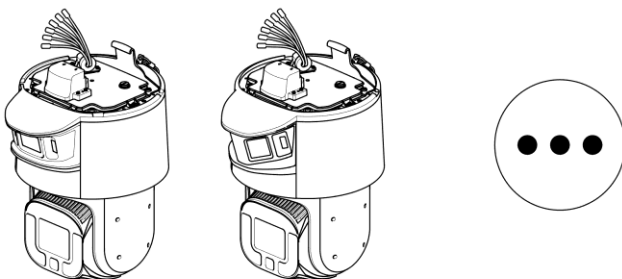
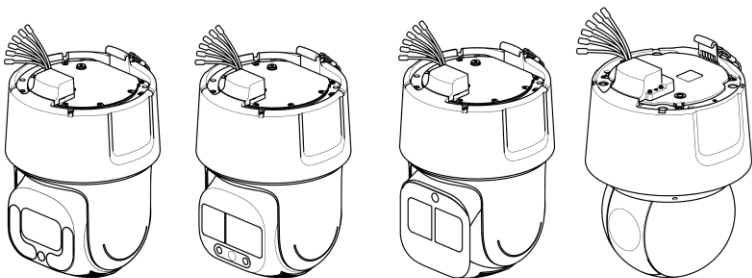


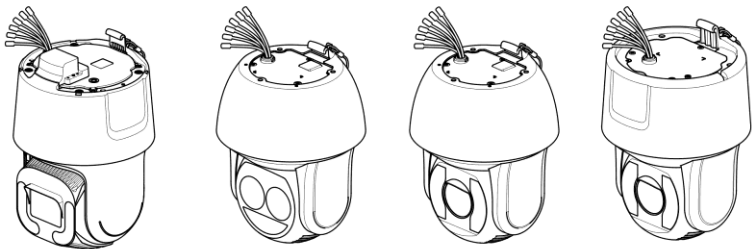



Network Speed Dome


Quick Start Guide



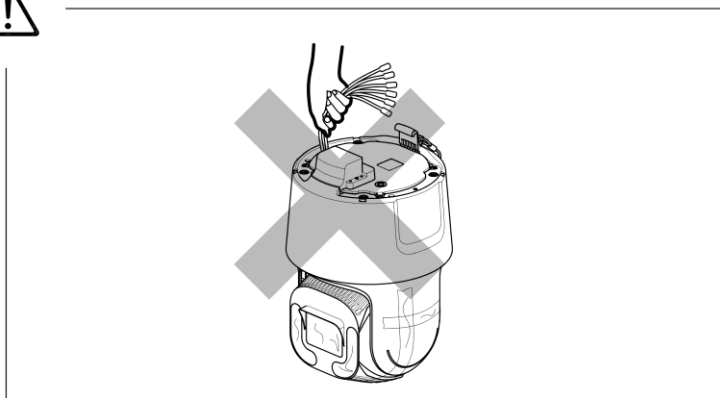




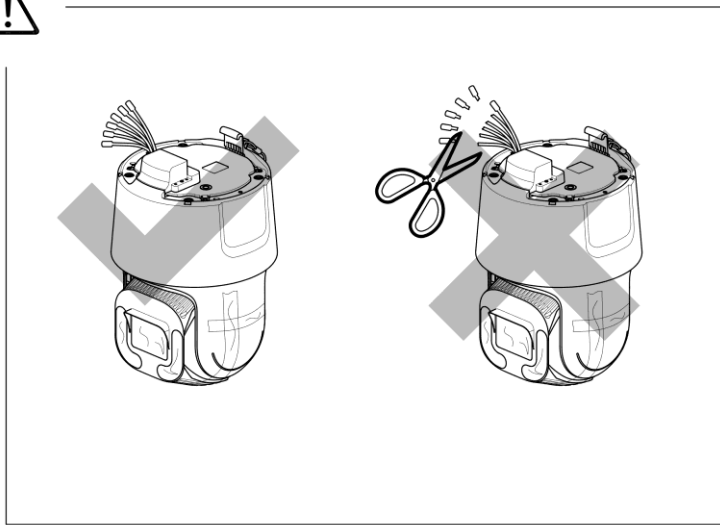





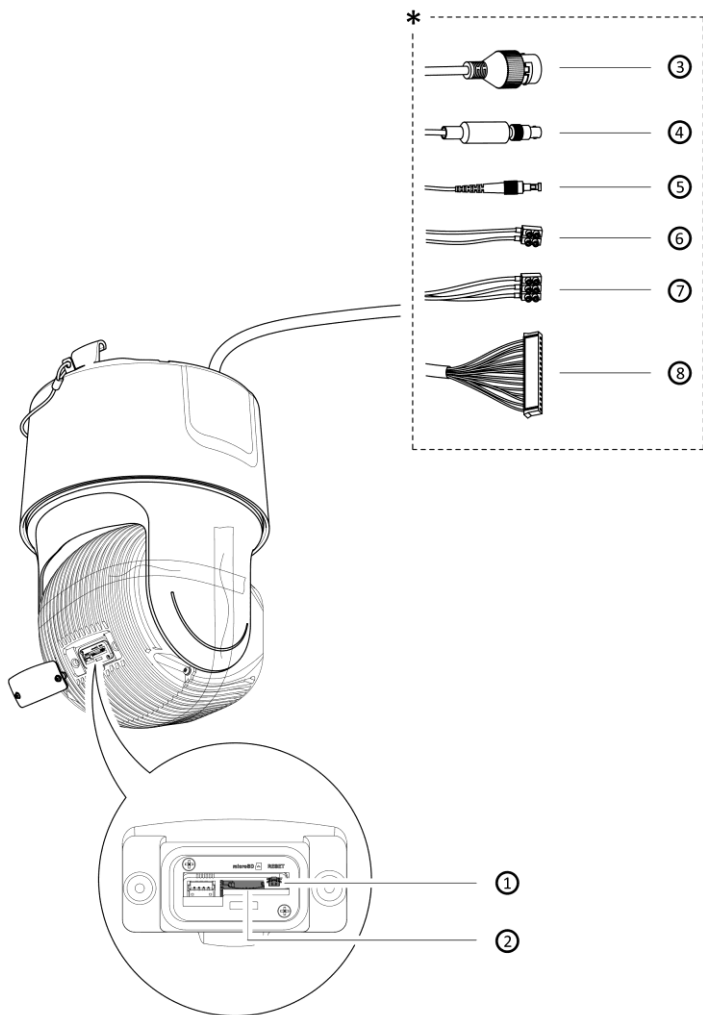


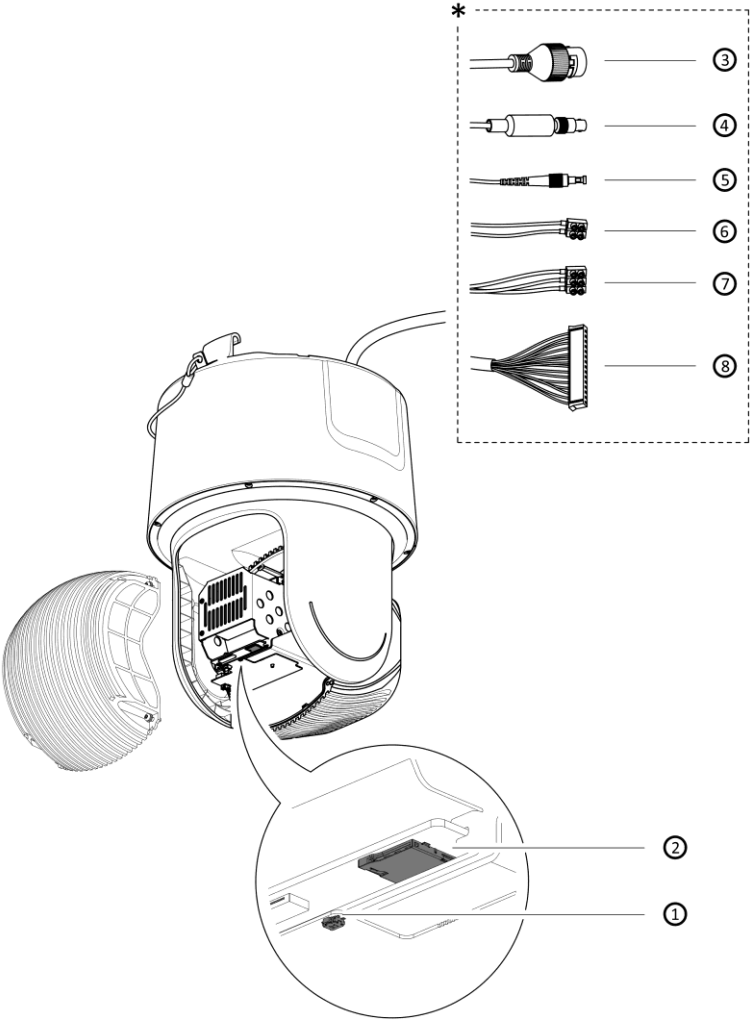

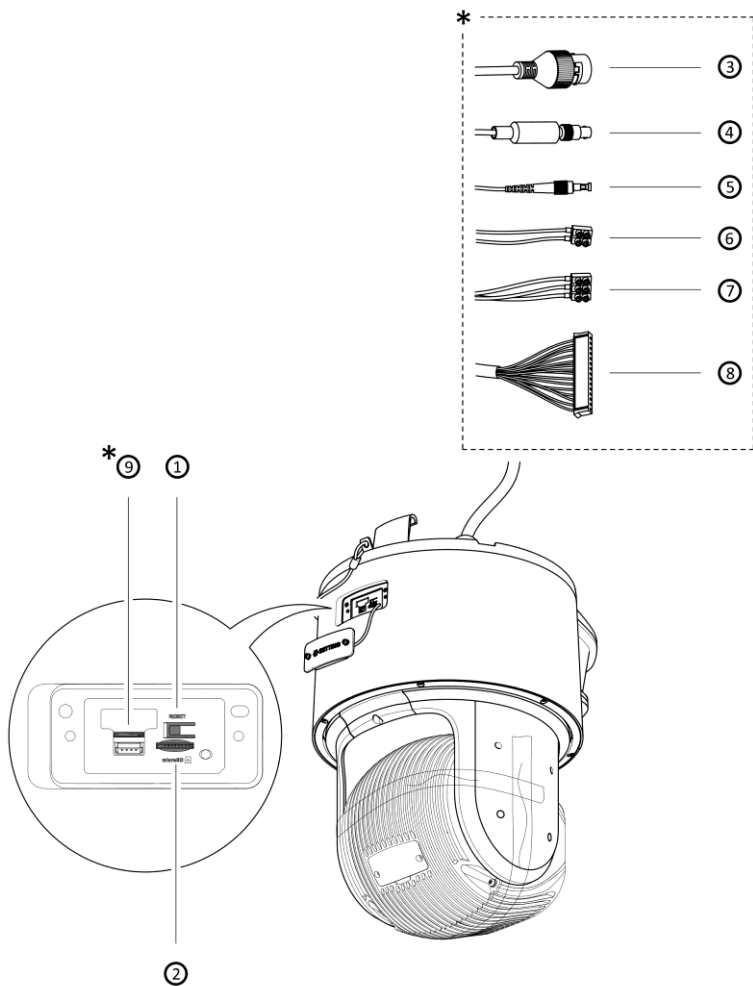

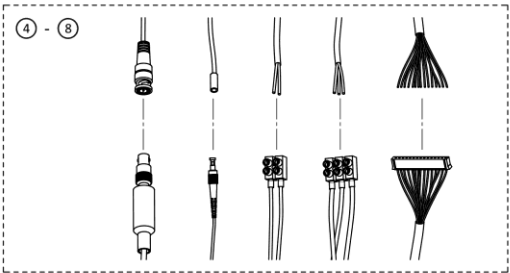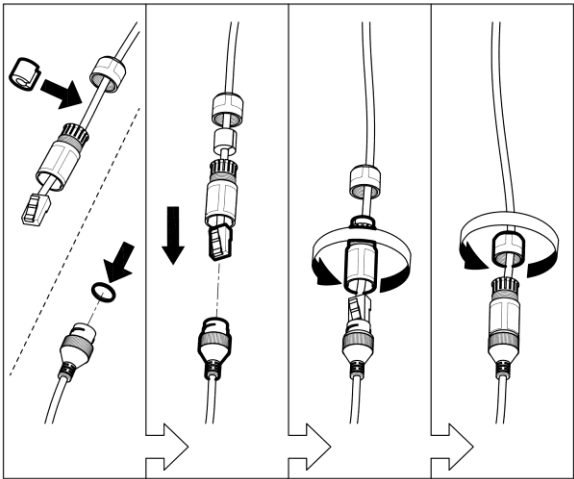
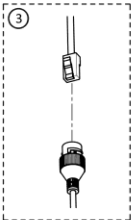


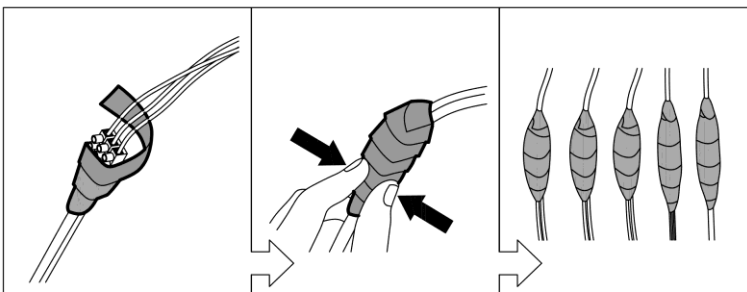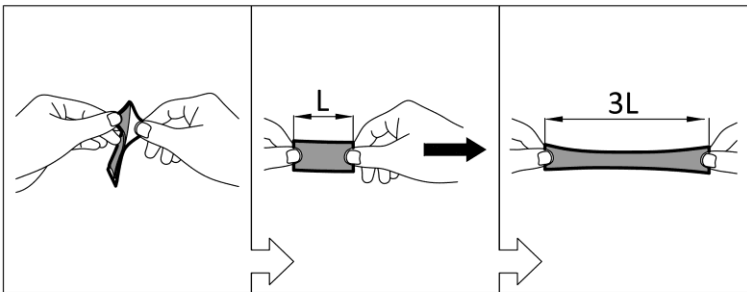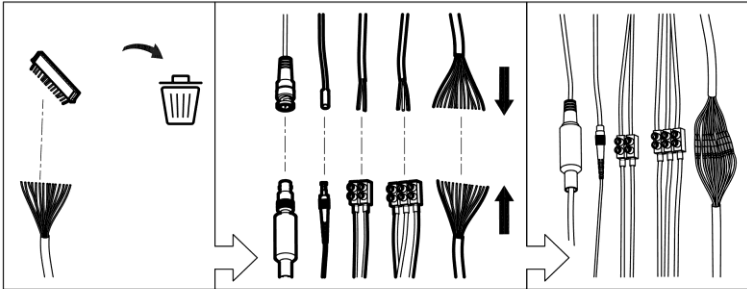

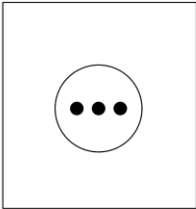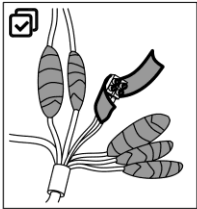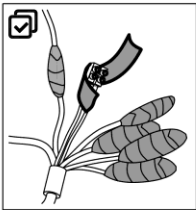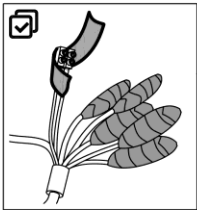









1

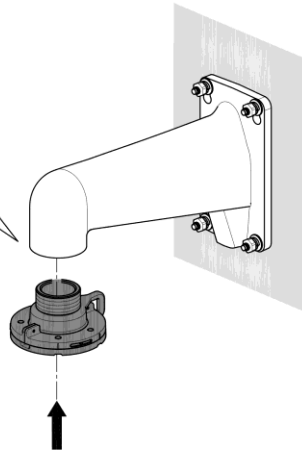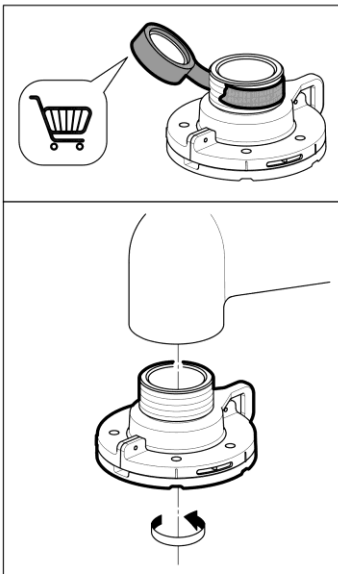


2

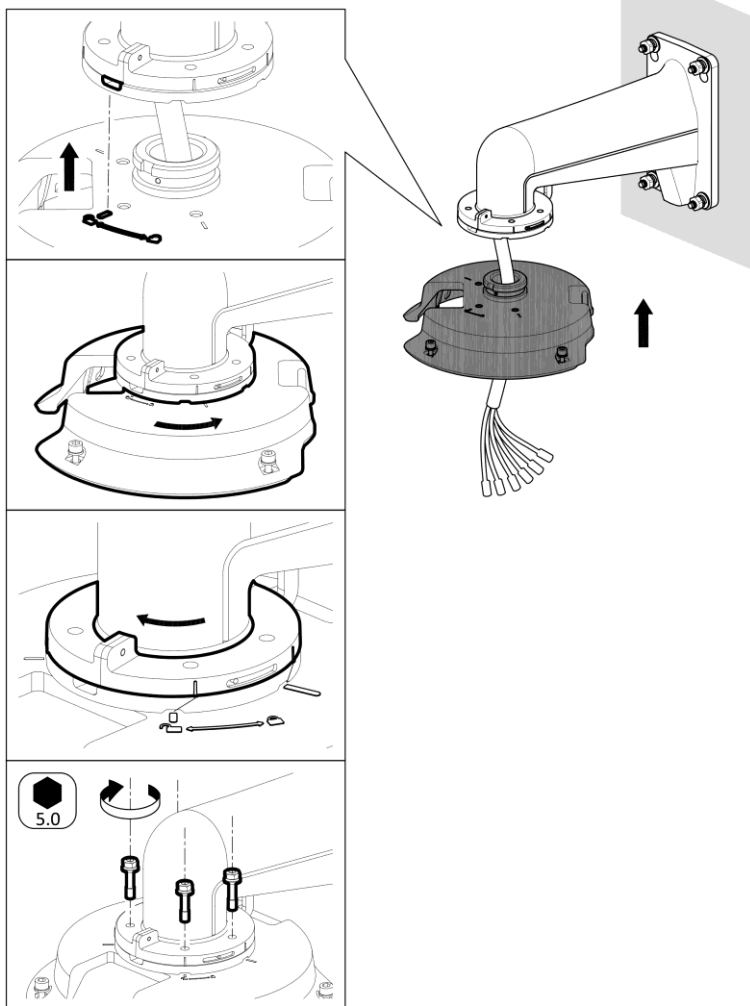


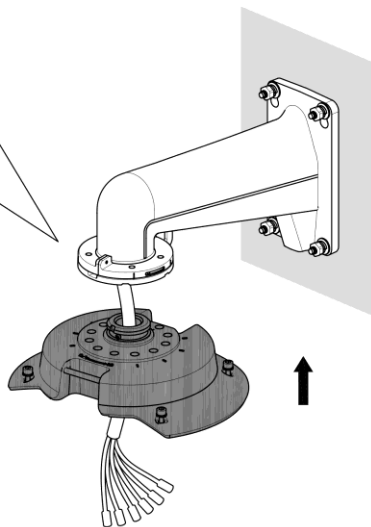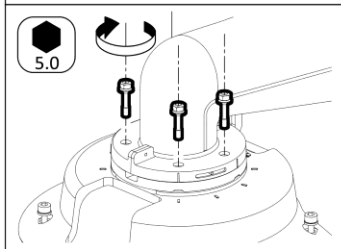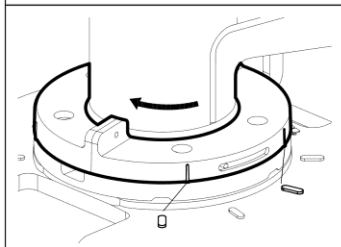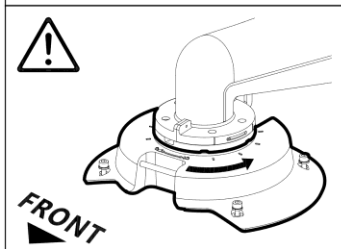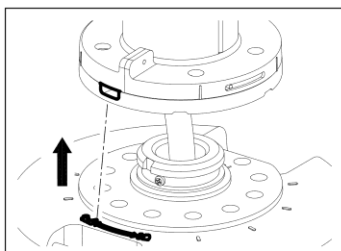


3

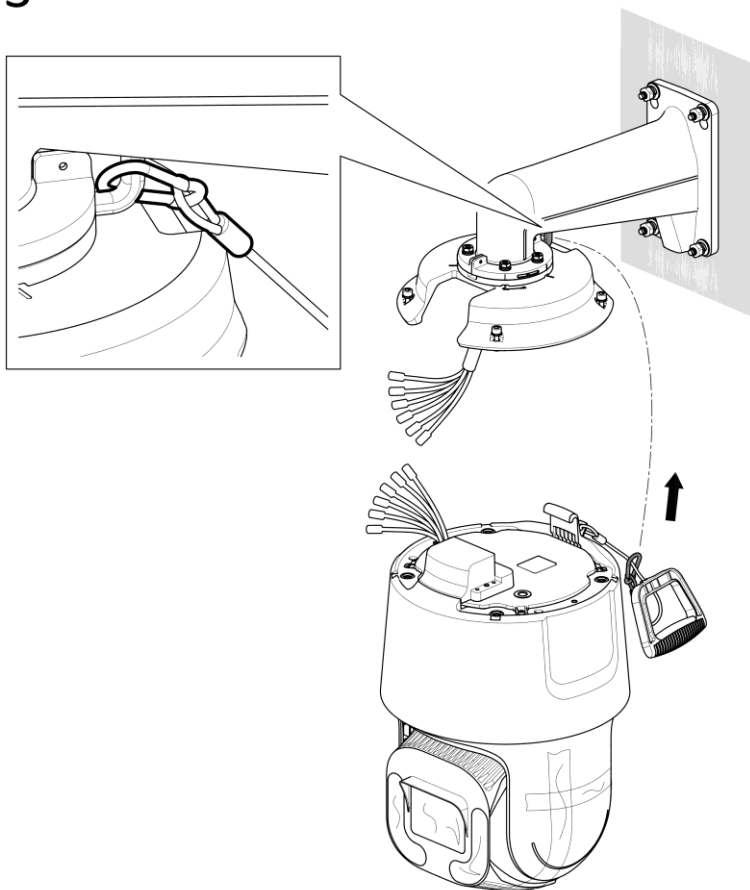


4

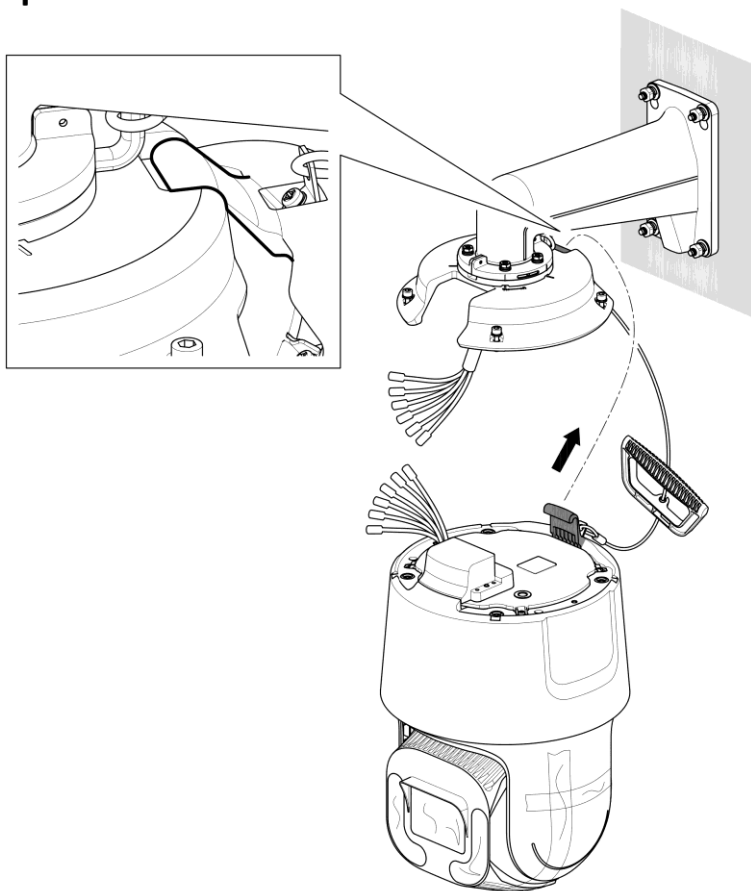


5

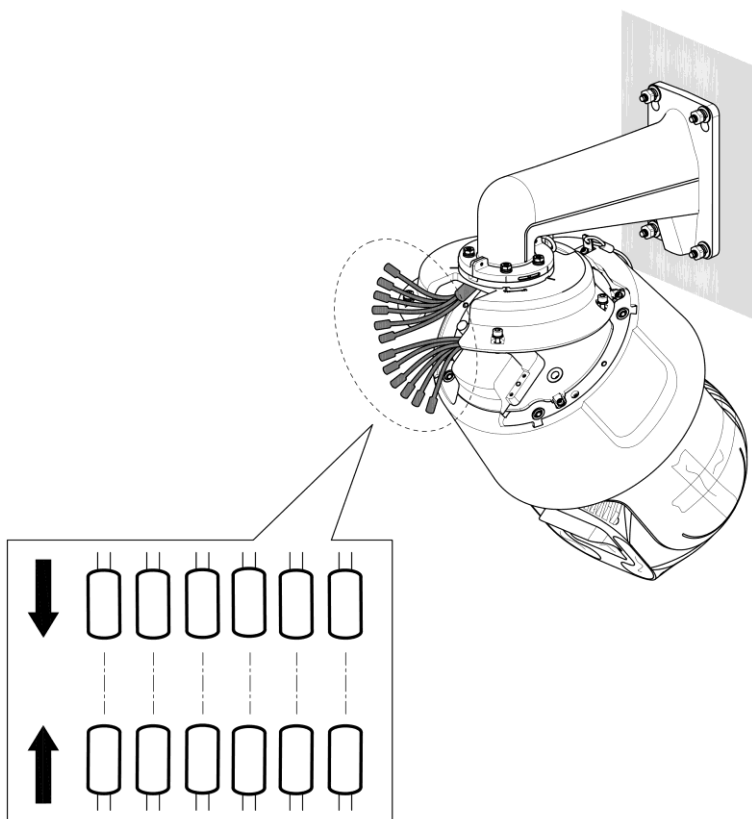


6

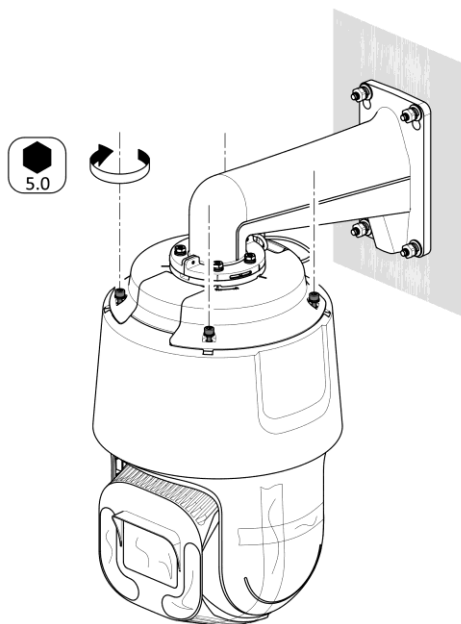

7

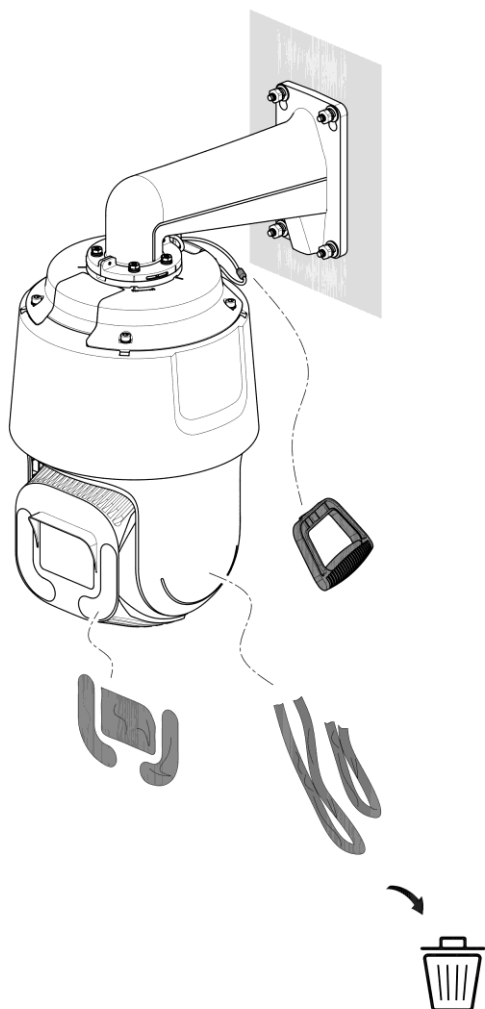

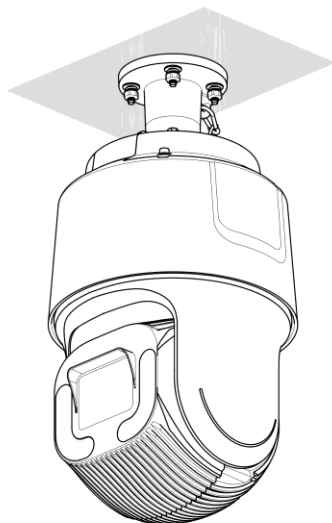

 Read this manual before using the product.


Product appearance is for reference only and may differ from the actual product.

Interface

- ① Reset
- ② Memory card slot
- ③ Network interface
- ④ BNC interface
- ⑤ Fiber optical interface
- ⑥ RS-485 interface interface
- ⑦ Power interface
- ⑧ Audio & Alarm interface
- ⑨ SIM card slot

Note: The interface varies with the models. Please refer to the product datasheet for details.

Alarm Output

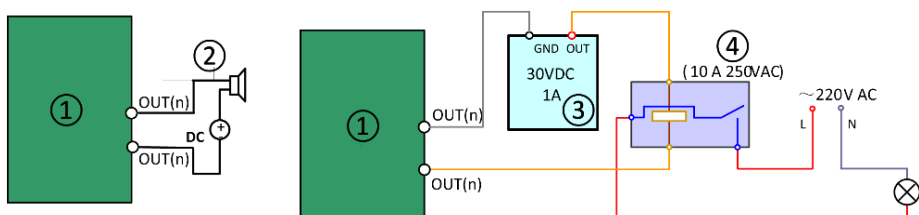

- ① Relay output
- ② DC load
- ③ Power supply
- ④ JQC-3FG Relay



Protective Measures for Installation



Activate and Access Network Camera

