

Art. 3612 Videophone for traditional video systems using coax video signal or balanced video signal

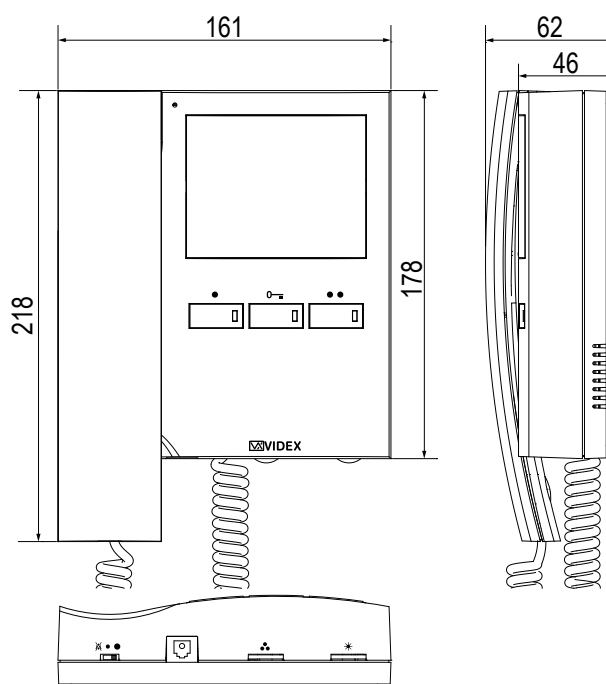


Fig. 1

DESCRIPTION

Videophone using 3.5" full colour active matrix LCD monitor for traditional (using Art. 890/Art. 890N or Art. 4838 or Art. VR4KAM) video door entry systems using composite video (coax cable) or balanced video (two wires V1, V2) to bring the video signal.





Are available "camera recall", "door open" and "service" buttons. 3 LED's give visual signalling relative to the videophone operation: the dot button LED switches ON when the videophone is switched ON, the key button LED switches on when the door is open (requires a +12Vdc at terminal 18 "DOL" when the door is open) and the two dot button LED switches on when the volume switch is in privacy position (requires a +12Vdc at terminal 17 "12Vi").

Controls: call tone volume (privacy position plus 2 levels), picture brightness and hue. Input for electronic call tone and local bell. The Art. 3612 is for surface mount (requires the Art. 5980 connection board plus wall mounting plate).


PUSH BUTTONS

●	Switches on the system and shows the video from the outdoor station on the monitor (camera recall). By picking up the handset and pressing the "key" push button it is possible to open the door.
0	Activates the electric lock (door-open) only when the videophone is on and the handset is picked up.
● ●	Service or camera recall push button depending on the settings (switches 2 and 3 of the 5 way dip-switch bank).

DIP-SWITCH SETTINGS

 SW1	During a call, the videophone rings and switches on showing the video from the door panel.	 SW1	 SW2	Composite video signal (coax cable) with termination activated.
 SW1	During a call, the videophone rings. Picking up the handset to answer, the monitor will switch on showing the video from the door panel.	 SW1	 SW2	Composite video signal (coax cable) with termination disabled.
 SW1	The ● ● button operates as service button. When pressed connect internally the terminal 3 to the terminal 16.	 SW1	 SW2	Balanced video signal (two wire cable) with termination activated.
 SW1	The ● ● button operates as camera recall button. This setting is used for systems with more door panels.	 SW1	 SW2	Balanced video signal (two wire cable) with termination disabled.

ART. 3612 SIGNALS ON CONNECTION BOARD TERMINALS

+12V	1	+12V output to supply the video distributor (Art. 894/Art. 894N)
TV1	2	Recall – button ●
TV2	3	Button ● ● (see settings)
1	4	Positive power input +15÷20Vdc 0,45A
2	5	Door opening command – button 0-π
3	6	Speech output
4	7	Speech input
5	8	Speech ground
6	9	Negative power input (ground)
7	10	Local call input (electronic call tone)
V	11	Coax video signal input 0,8-1,5 Vpp (see settings)
V1		Balanced video signal input sync. – (see settings)
M	12	Coax video signal ground (see settings)
V2		Balanced video signal sync. + (see settings)
R	13	Speech common for intercommunicating systems
C	14	External call input (electronic call tone)
–	15	Speech ground for intercommunicating systems
T	16	Service push button common ● ●
	17	
	18	
12Vi	19	+12Vdc power supply input to switch on the ● ● button LED when the volume switch is in privacy position
DOL	20	+12Vdc power supply input to switch on the 0-π button LED

TECHNICAL SPECIFICATION

Voltages 20Vdc (+2-5V)

Power Consumption: **Stand-by** **Operating**
 0mA 250mA

Working Temperature: -10 +50 °C

CUSTOMER SUPPORT





All Countries:
VIDEX ELECTRONICS S.P.A.
 www.videx.it - technical@videx.it
 Tel: +39 0734-631669
 Fax: +39 0734-632475

UK Customers:
VIDEX SECURITY LTD
 www.videx-security.com
 Tech Line: 0191 224 3174
 Fax: 0191 224 1559




The product is CE marked demonstrating its conformity and is for distribution within all member states of the EU with no restrictions. This product follows the provisions of the European Directives 2004/108/ECC (EMC); 2006/95/ECC (LVD) and 93/68/ECC (CE marking).

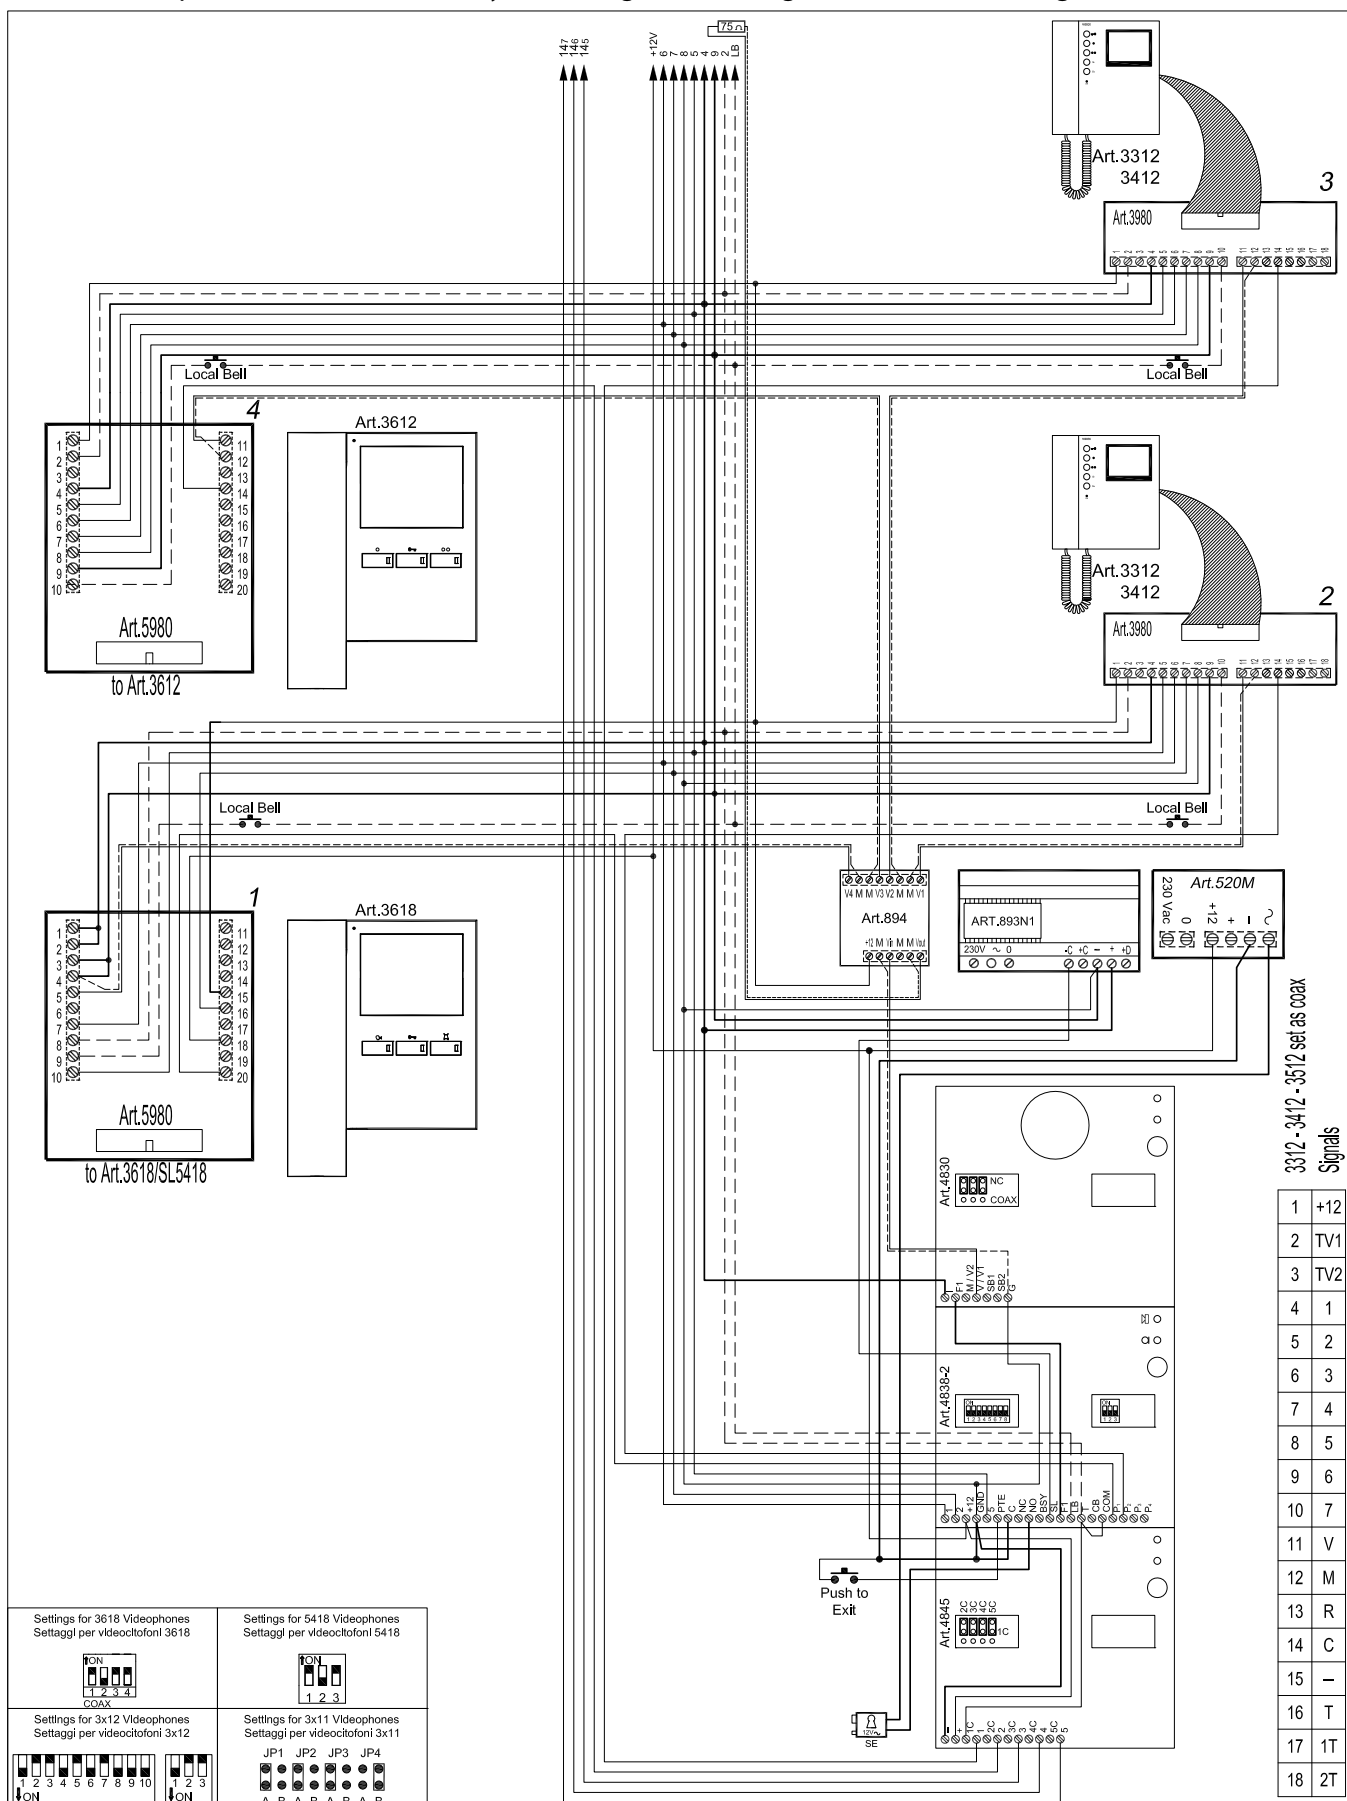


Settings for 3618 Videophones Settaggi per videocitofoni 3618	Settings for 5418 Videophones Settaggi per videocitofoni 5418
	
Settings for 3x12 Videophones Settaggi per videocitofoni 3x12	Settings for 3x11 Videophones Settaggi per videocitofoni 3x11
	



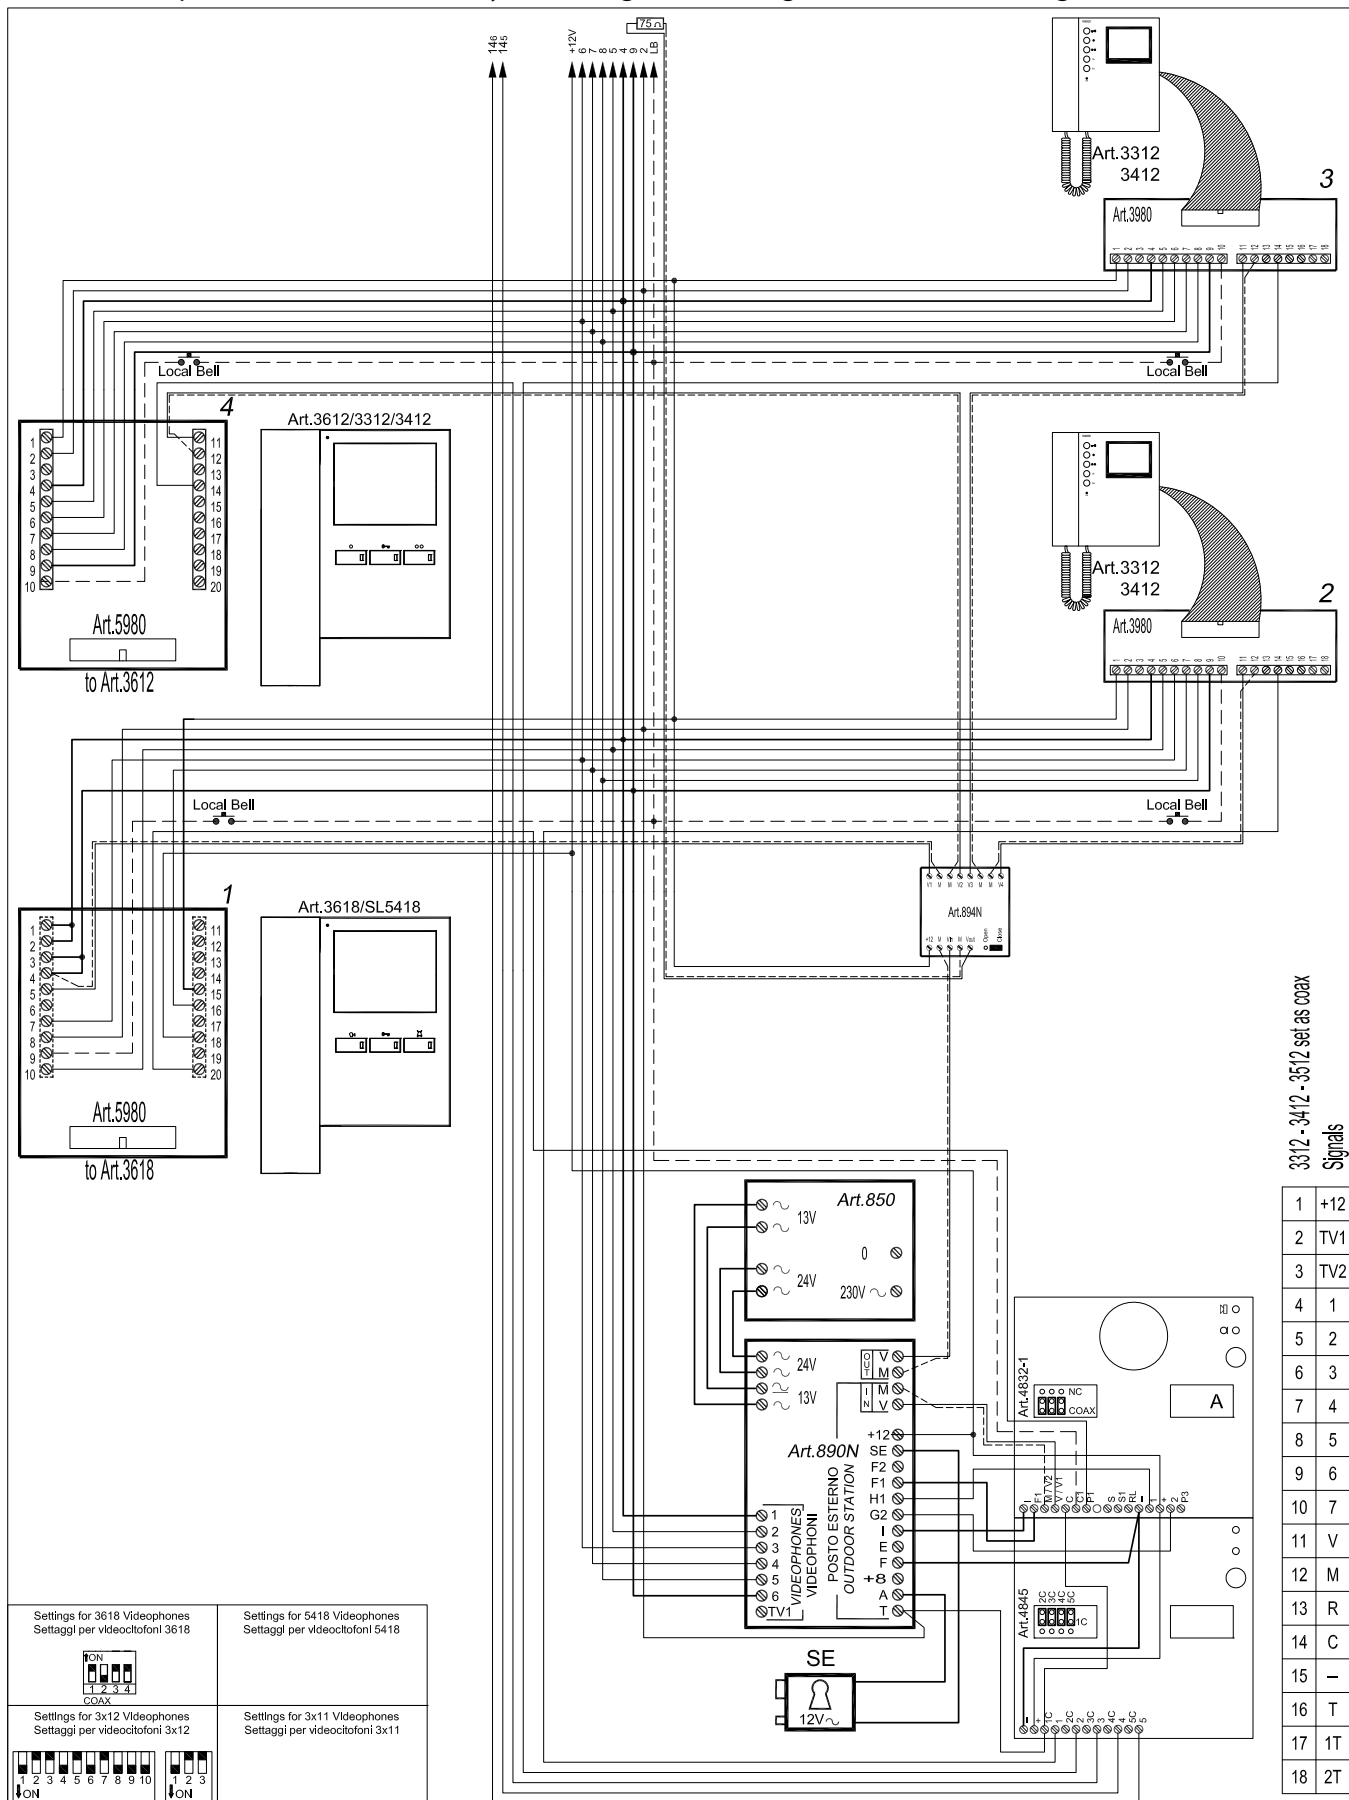


Settings for 3618 Videophones Settaggi per videofononi 3618 	Settings for 5418 Videophones Settaggi per videofononi 5418 
Settings for 3x12 Videophones Settaggi per videofononi 3x12 	Settings for 3x11 Videophones Settaggi per videofononi 3x11 

Title:		Data creazione: 21/09/2011		Foglio: 1 / 1
Title:		Data modifica: 22/09/2011		
Notes:		Autore: Marco Rongoni		
Note:		Cod. File: 4kvd001f.dwg		

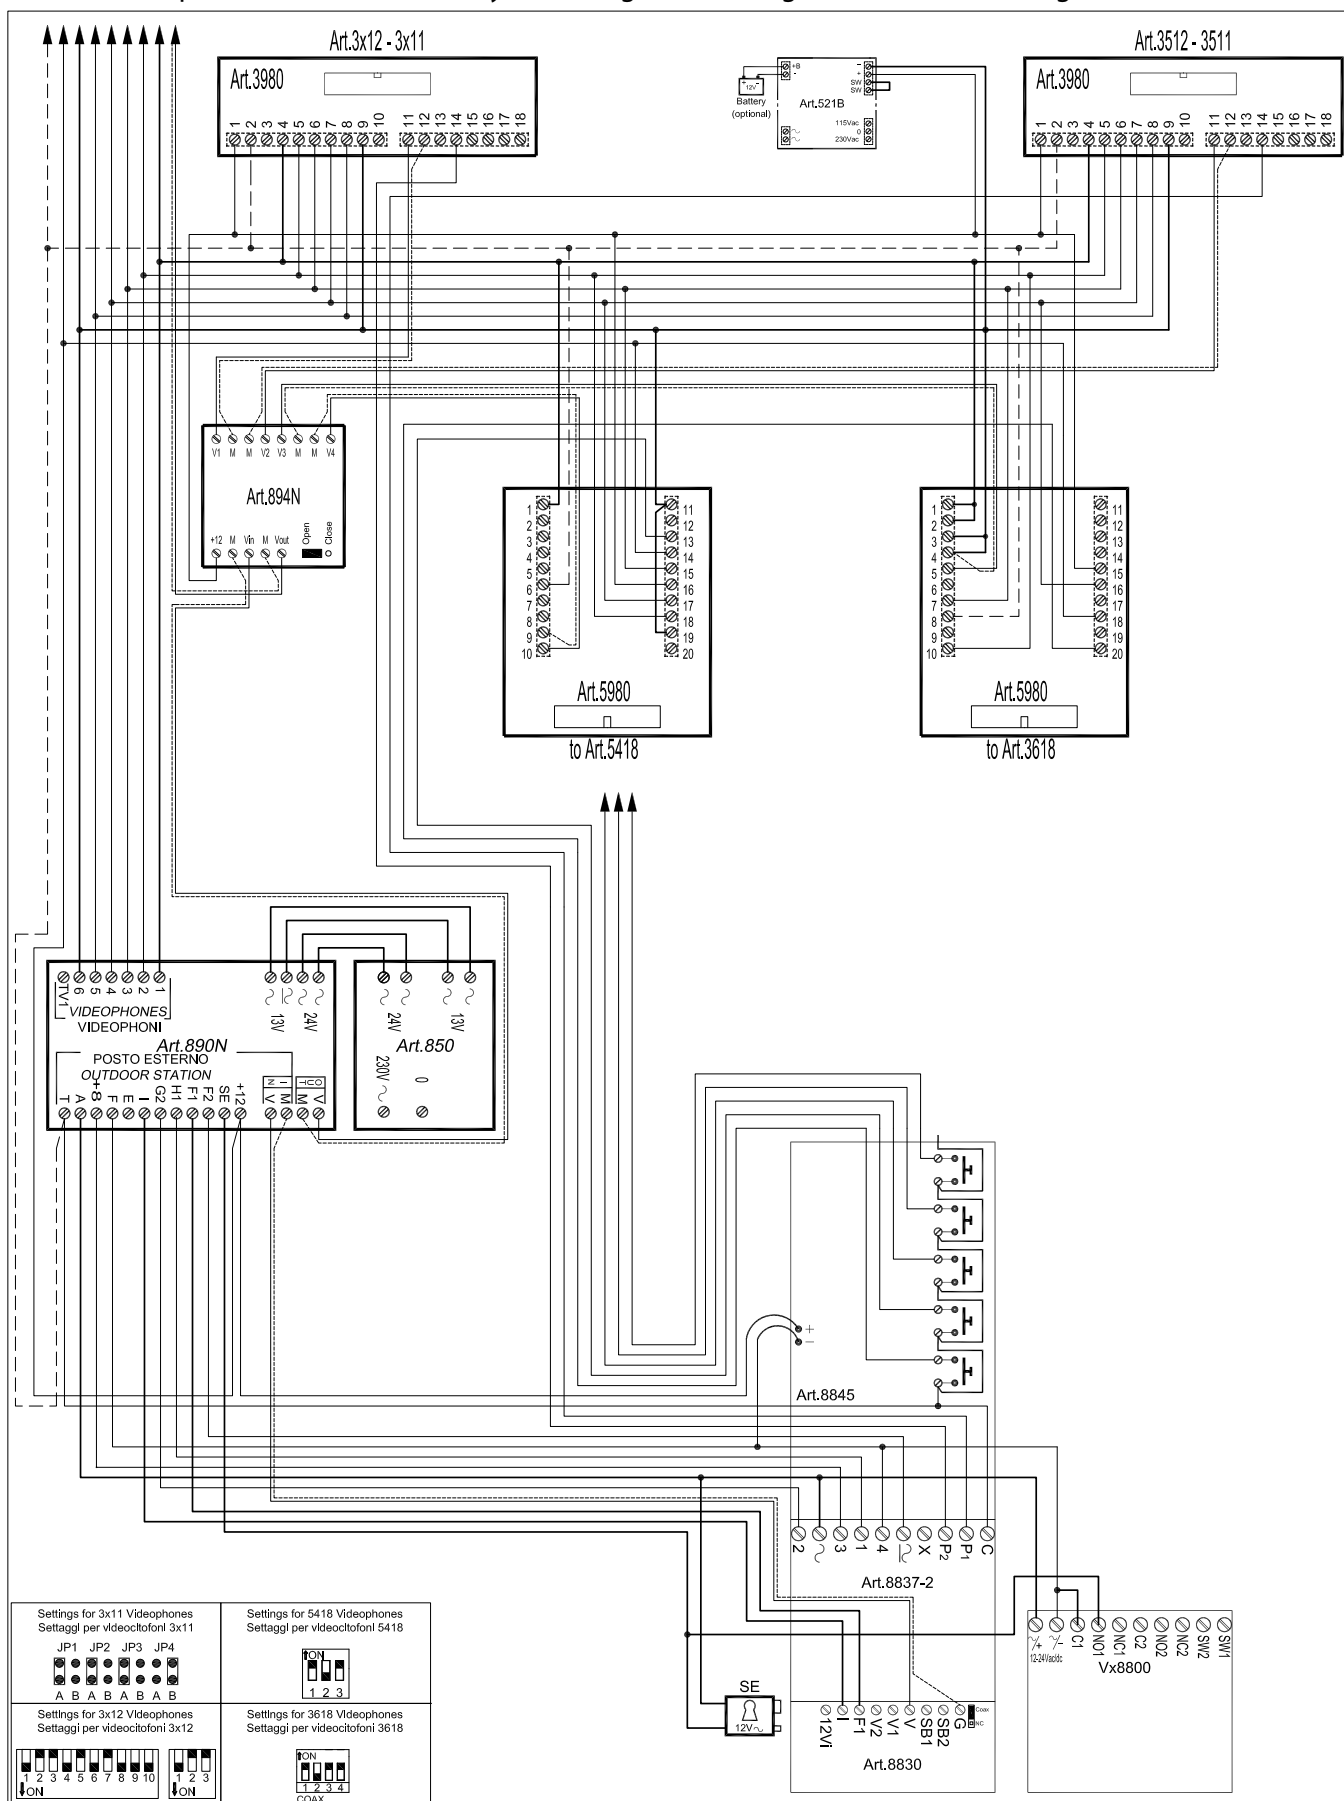


Settings for 3x11 Videophones Settaggi per videocitofoni 3x11 JP1 JP2 JP3 JP4 A B A B A B A B Settings for 3x12 Videophones Settaggi per videocitofoni 3x12 1 2 3 4 5 6 7 8 9 10 ON	Settings for 5418 Videophones Settaggi per videocitofoni 5418 1 2 3 ON Settings for 3618 Videophones Settaggi per videocitofoni 3618 1 2 3 4 ON COAX
--	--

Title: _____ Titolo: _____ Notes: _____ Note: _____	Data creazione: 19/03/2011 Data modifica: 03/10/2011 Autore: Marco Rongoni Cod. File: s8k-001d.wdg	Foglio 1 / 1
--	---	--------------

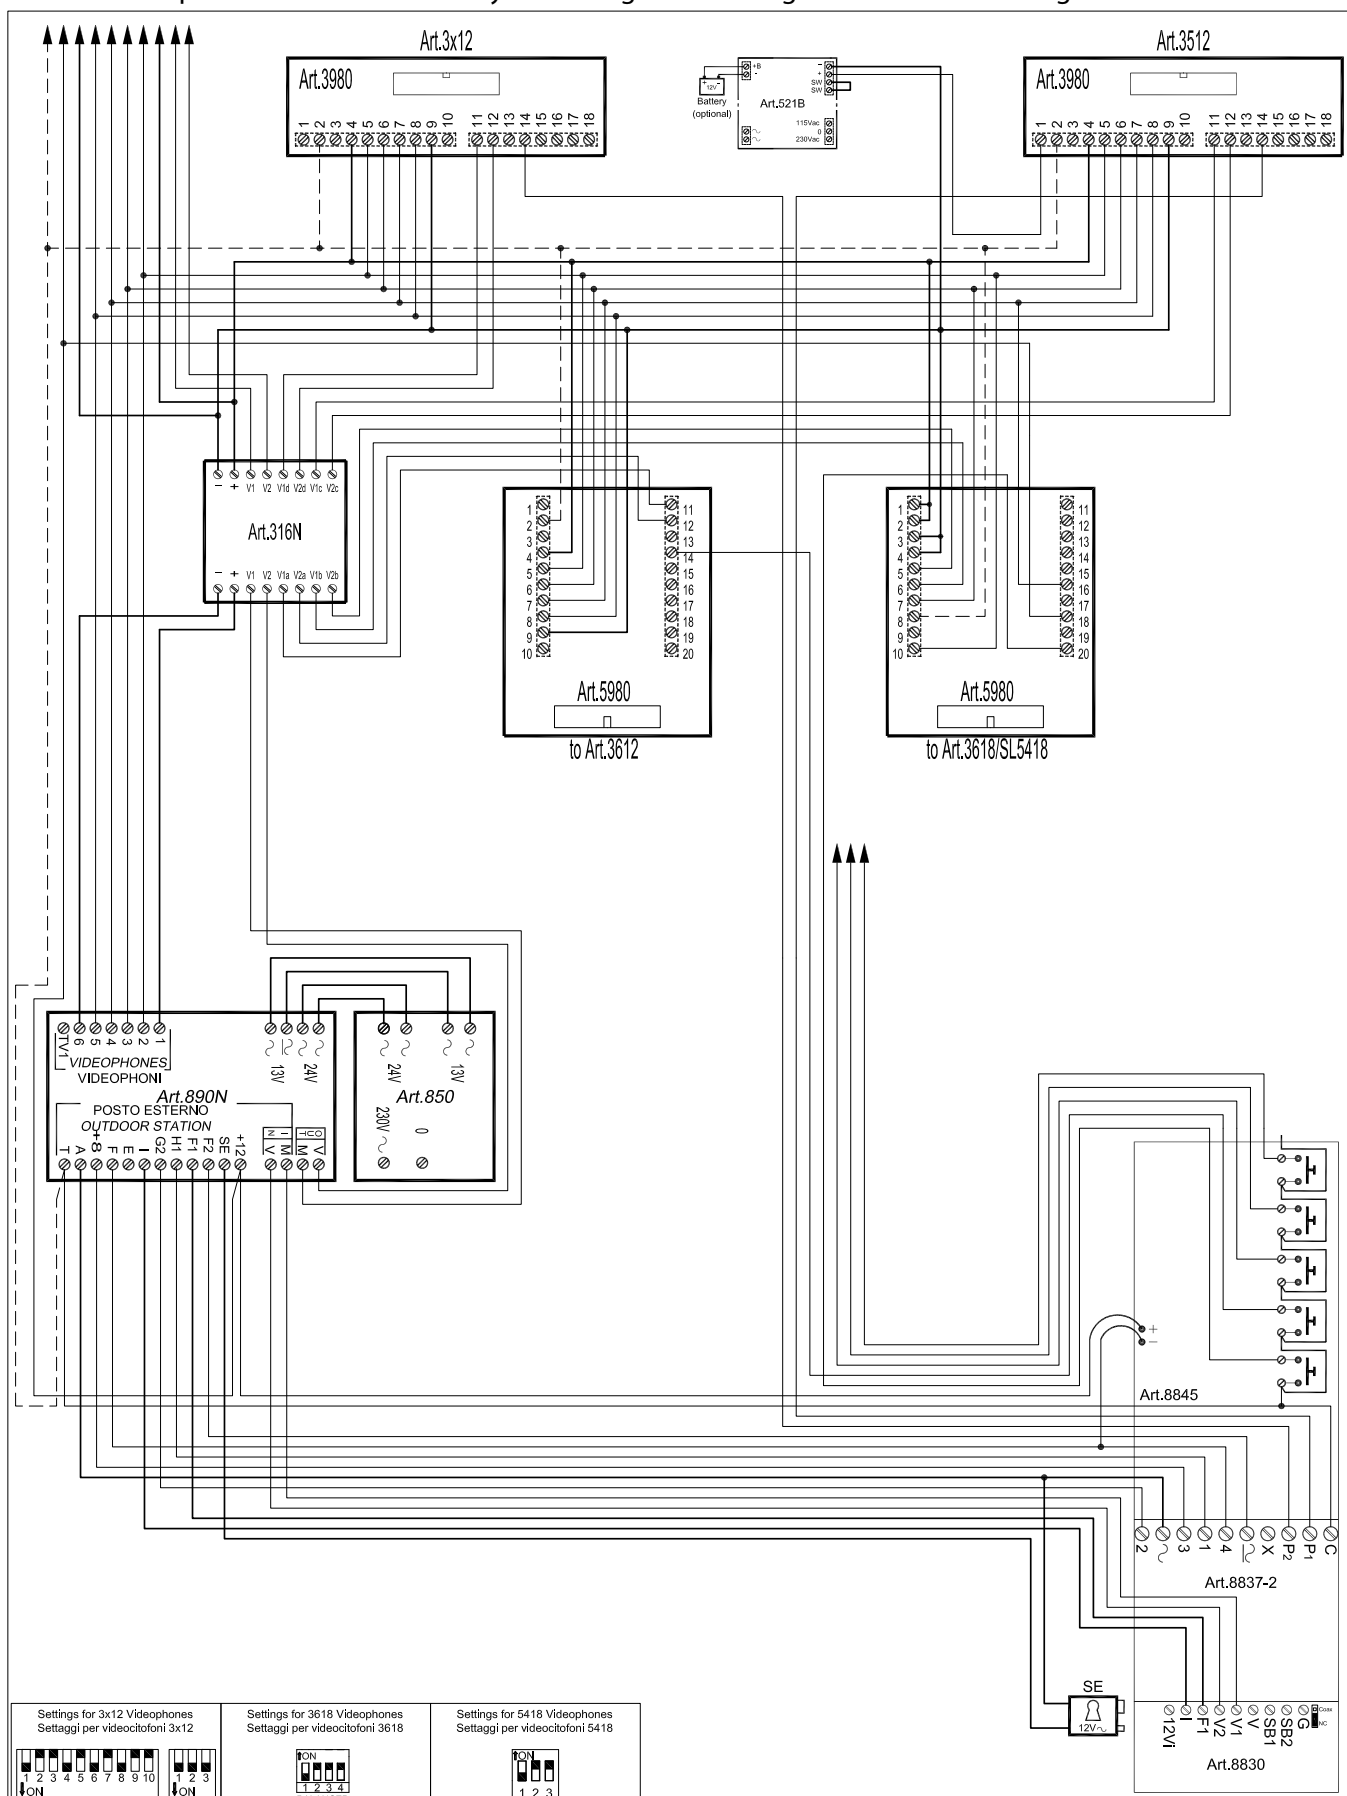

Title: . Titolo: .	Data creazione: 12/09/2011 Data modifica: 19/10/2011 Autore: Marco Rongoni Cod. File: s8k-001f.dwg	Foglio 1 / 1
Videx Electronics S.p.A. Via del Lavoro 1, 63020 Monte Giberto (AP) Phone: +39 0734 631669 - Fax +39 0734 631669 www.videx.it - info@videx.it		

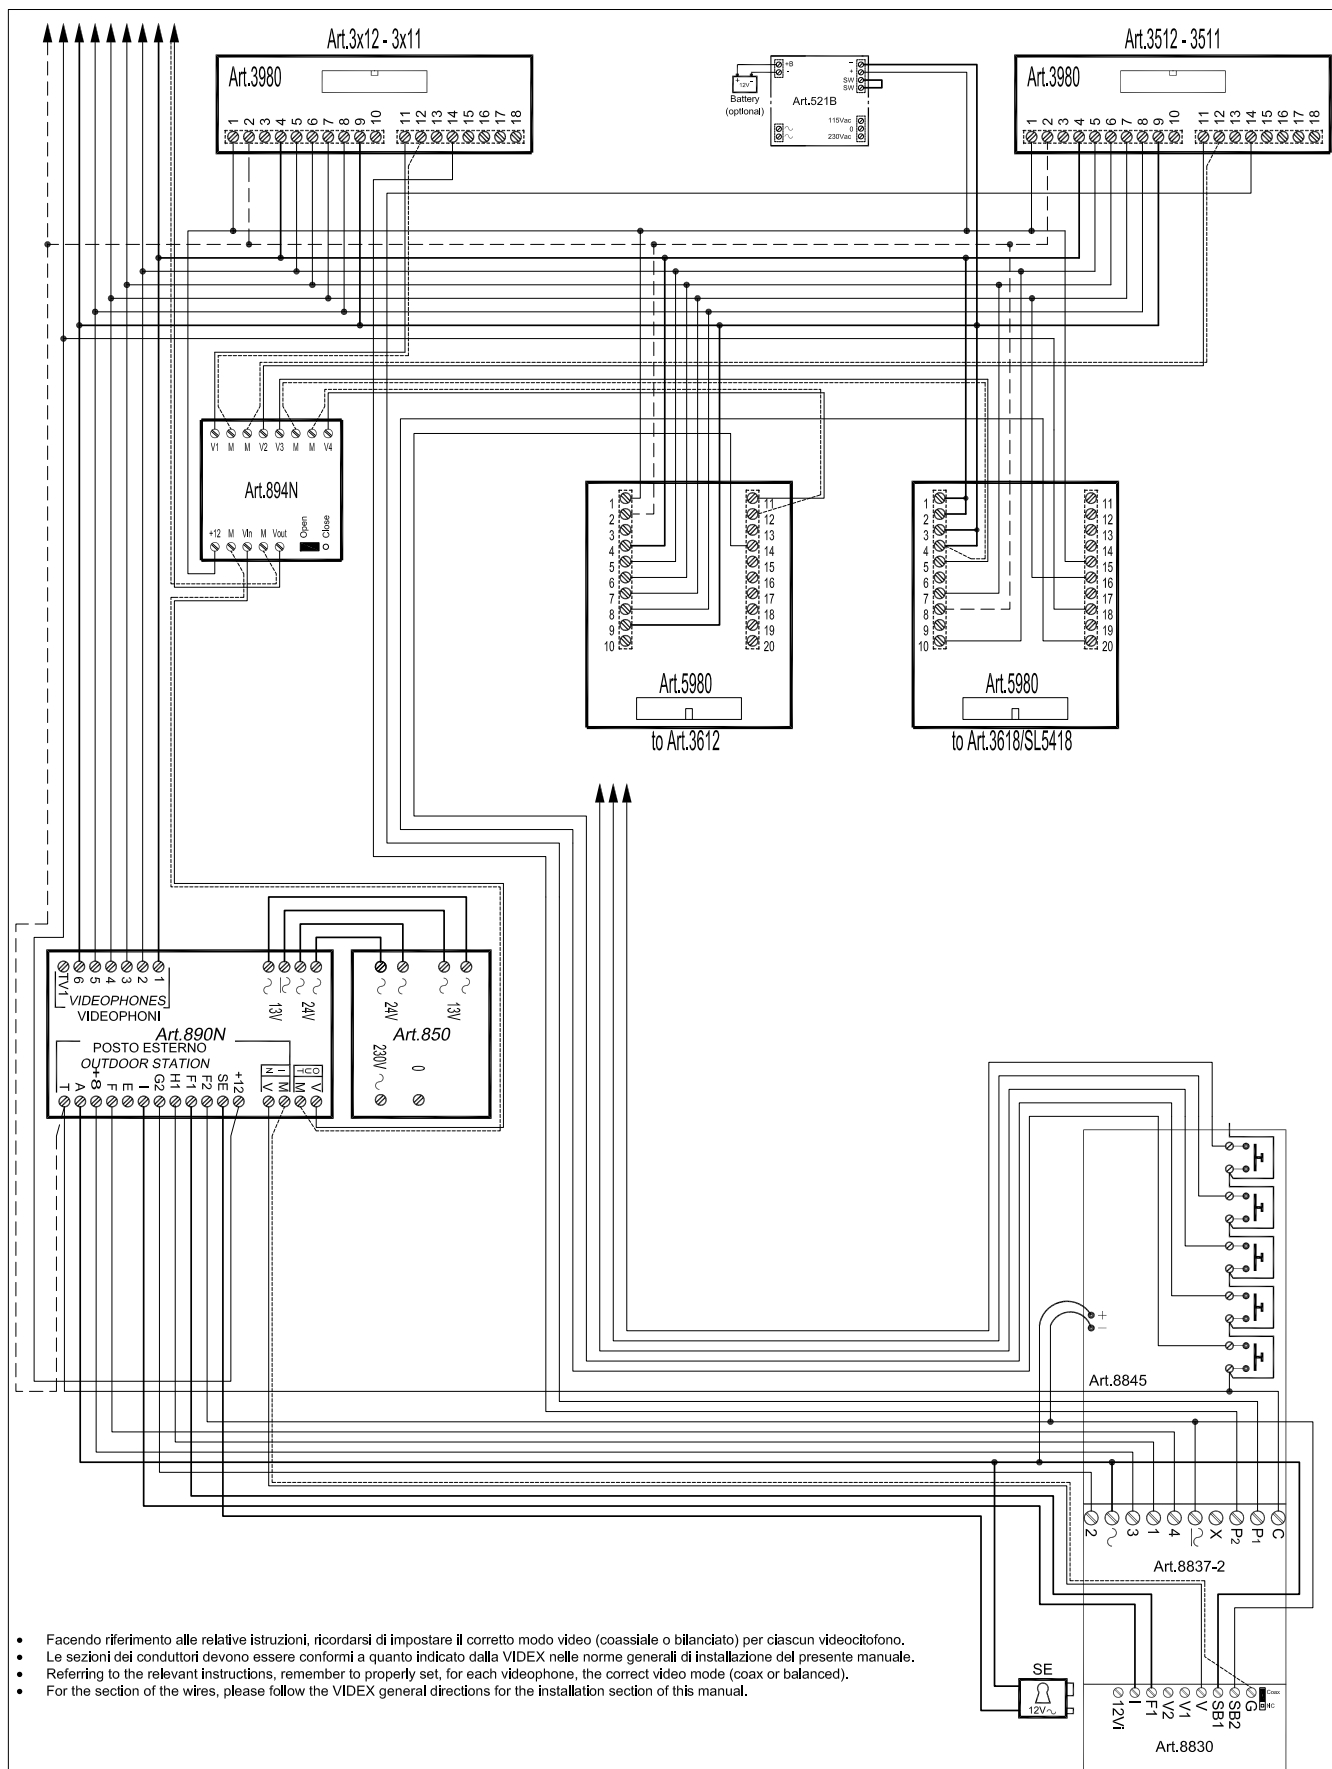

- Facendo riferimento alle relative istruzioni, ricordarsi di impostare il corretto modo video (coassiale o bilanciato) per ciascun videocitofono.
- Le sezioni dei conduttori devono essere conformi a quanto indicato dalla VIDEX nelle norme generali di installazione del presente manuale.
- Referring to the relevant instructions, remember to properly set, for each videophone, the correct video mode (coax or balanced).
- For the section of the wires, please follow the VIDEX general directions for the installation section of this manual.

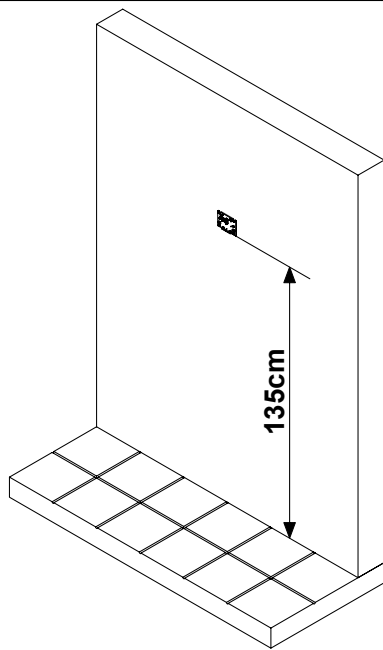


Fig. 1

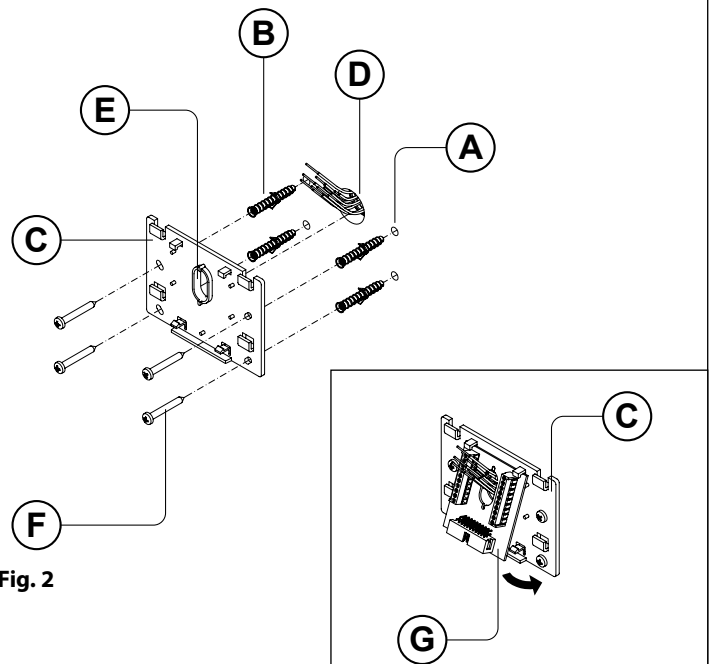


Fig. 2

Fig. 3

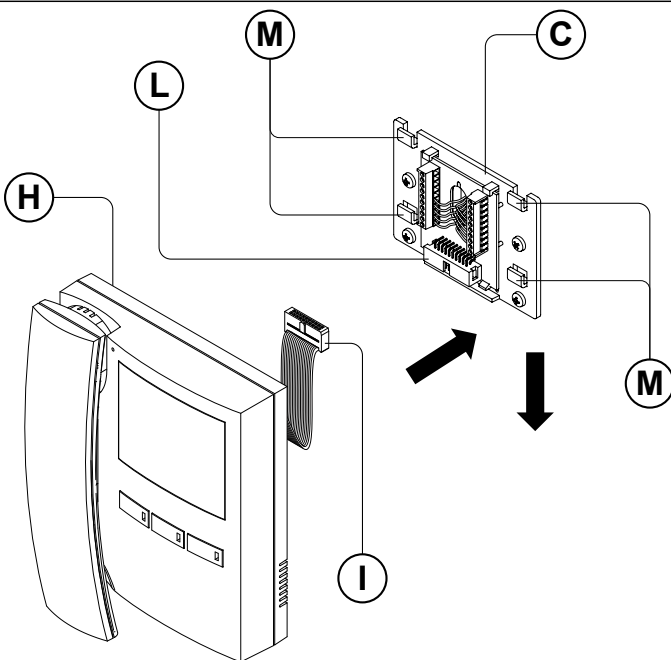


Fig. 4

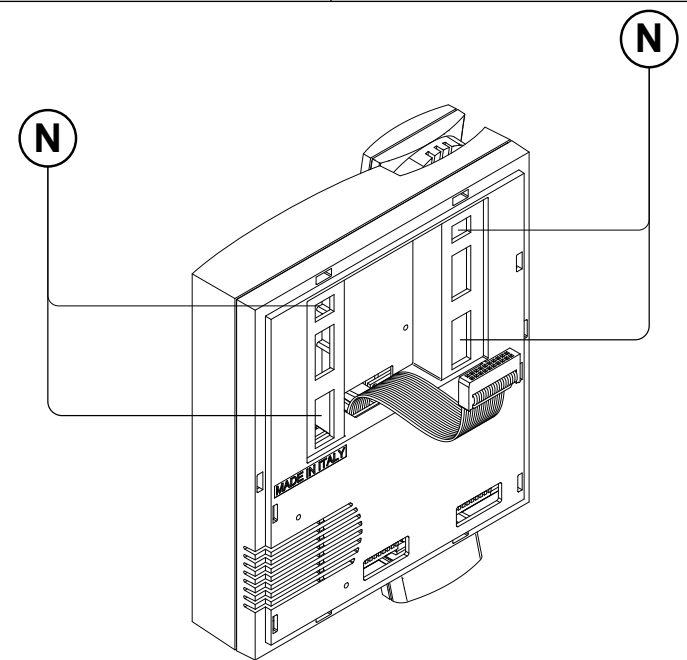


Fig. 5

1. Cables must be fed through the opening **E** (**Fig. 2**) of the mounting plate **C**, which should be fitted approximately 135cm from finished floor level as shown in **Fig. 1**;
2. Place the mounting plate **C** against the wall feeding the wire group **D** through opening **E** of the mounting plate and mark the fixing holes **A** (**Fig. 2**);
3. Drill the fixing holes **A**, insert the wall plugs **B** then with the cables threaded through opening **E** fix the mounting plate **C** to the wall with the 4 screws provided **F** (**Fig. 2**);
4. Hook the PBC connection board **G** to the mounting plate **C** as shown in **Fig. 3** and connect the wires (using the screwdriver provided) to the terminals as shown in the diagram provided;
5. Once the wires are connected, hook the videophone **H** to the mounting plate **C** as shown in **Fig. 3**;
6. Connect the Plug **I** on the ribbon cable from the videophone to the plug **L** on the PCB connection board **G**;
7. Place the videophone **H** against the 4 hooks **M** on the mounting plate **C** (in line with the 4 openings **N** on the rear side of the videophone **Fig. 5**) and push down as suggested by the pointers in **Fig. 4**, the videophone will lock into place;
8. To remove the videophone, hold it firmly and push the unit in an upward direction until the videophone **H** unlocks from the mounting plate **C**.

[illegible]

[illegible]



THE POWER TO SECURE



made in
ITALY

MANUFACTURER

VIDEX ELECTRONICS S.P.A.

Via del Lavoro, 1 - 63846 Monte Giberto (FM) Italy
Tel (+39) 0734 631669 - Fax (+39) 0734 632475
www.videx.it - info@videx.it

CUSTOMER SUPPORT

All Countries:

VIDEX ELECTRONICS S.P.A.

www.videx.it - technical@videx.it
Tel: +39 0734-631669 - Fax: +39 0734-632475

UK Customers:

VIDEX SECURITY LTD

www.videx-security.com
Tech Line: 0191 224 3174 - Fax: 0191 224 1559

Main UK office:

VIDEX SECURITY LTD

1 Osprey Trinity Park
Trinity Way
LONDON E4 8TD
Phone: (+44) 0870 300 1240
Fax: (+44) 020 8523 5825
www.videx-security.com
marketing@videx-security.com

Northern UK office:

VIDEX SECURITY LTD

Unit 4-7
Chillingham Industrial Estate
Chapman Street
NEWCASTLE UPON TYNE - NE6 2XX
Tech Line: (+44) 0191 224 3174
Phone: (+44) 0870 300 1240
Fax: (+44) 0191 224 1559

Greece office:

VIDEX HELLAS Electronics

48 Filolaou Str.
11633 ATHENS
Phone: (+30) 210 7521028
(+30) 210 7521998
Fax: (+30) 210 7560712
www.videx.gr
videx@videx.gr

Danish office:

VIDEX DANMARK

Hammershusgade 15
DK-2100 COPENHAGEN
Phone: (+45) 39 29 80 00
Fax: (+45) 39 27 77 75
www.videx.dk
videx@videx.dk

Benelux office:

VIDEX BENELUX

E3 laan, 93
B-9800 DEINZE
Phone: (+32) 9 380 40 20
Fax: (+32) 9 380 40 25
www.videxbenelux.be
info@videxbenelux.be



The product is CE marked demonstrating its conformity and is for distribution within all member states of the EU with no restrictions. This product follows the provisions of the European Directives 2014/30/EU (EMC); 2014/35/EU (LVD); 2011/65/EU (RoHS); CE marking 93/68/EEC.